

 
Receiving Automatic Emails for UF-55 Warnings


Steljes Technical Document 190

To use this facility, the projector needs to be connected to a network and set up correctly.

To set up the network, access the settings menu with the remote control. From here, DHCP or specific IP address can be selected/set.

Default Settings

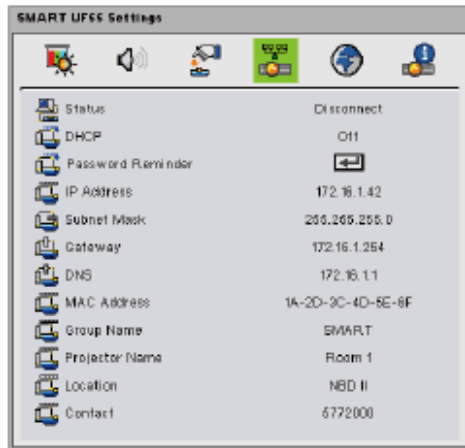

SMART UF55 Settings	
Status	Disconnect
DHCP	Off
Password Reminder	
IP Address	172.16.1.42
Subnet Mask	255.255.255.0
Gateway	172.16.1.254
DNS	172.16.1.1
MAC Address	1A-2D-3C-4D-5E-6F
Group Name	SMART
Projector Name	Room 1
Location	NBD II
Contact	6772000

Status


Display the network connection status.

DHCP

Turn the network DHCP on or off.

- ▶ On assigns an IP address to the projector from the DHCP server automatically.
- ▶ Off allows you to assign an IP address manually.

Password Reminder

Press  on the remote control to e-mail the yourself password you set through Web Management.



IP Address

Display the IP address.

Subnet Mask

Display the subnet mask number.

Once the projector is correctly connected to the network and has an IP address, the web-management can be accessed – as below.

User Controls

Web Management

 
This menu allows you to access Web Management and manage the projector from a remote location.

Accessing Web Management


- ▶ If the projector is connected to a network, the IP address appears on the OSD screen.

Example

 Be sure to use JavaScript supportive browser.

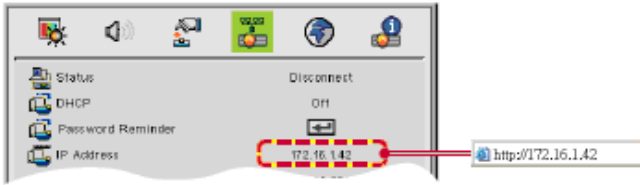

 - ▶ Start the Internet Explorer® or Netscape Navigator™ Internet browser and enter the IP Address into the address field. The Web page displays as below.

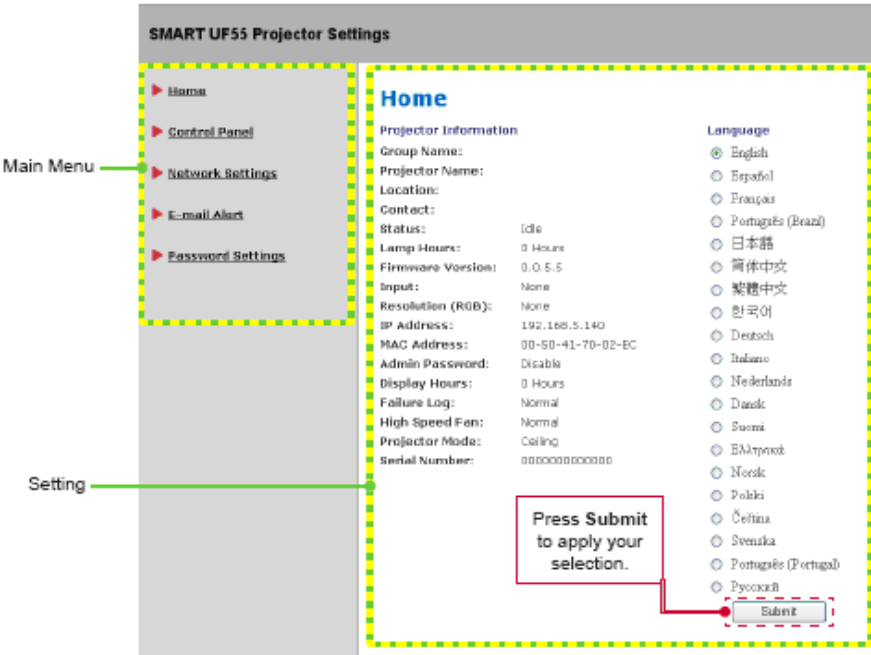

SMART UF55 Projector Settings

Main Menu

- ▶ Home
- ▶ Control Panel
- ▶ Network Settings
- ▶ E-mail Alert
- ▶ Password Settings

Setting

Home

Projector Information

Group Name:
 Projector Name:
 Location:
 Contact:
 Status: Idle
 Lamp Hours: 0 Hours
 Firmware Version: 0.0.5.5
 Input:
 Resolution (R0B): None
 IP Address: 192.168.5.140
 MAC Address: 00-50-41-70-02-EC
 Admin Password: Disable
 Display Hours: 0 Hours
 Failure Log: Normal
 High Speed Fan: Normal
 Projector Mode: Ceiling
 Serial Number: 000000000000

Language

- English
- Español
- Français
- Português (Brazil)
- 日本語
- 简体中文
- 繁體中文
- 한국어
- Deutsch
- Italiano
- Nederlands
- Dansk
- Suomi
- Ελληνικά
- Norsk
- Polski
- Čeština
- Svenska
- Português (Portugal)
- Пусокан

Press Submit to apply your selection.

From here, the email and alert details can be set.

User Controls

E-mail Alert


The E-mail Alert allows you to enter your e-mail alert address and adjust related settings.


SMART UF55 Projector Settings


- ▶ [Home](#)
- ▶ [Control Panel](#)
- ▶ [Network Settings](#)
- ▶ [E-mail Alert](#)
- ▶ [Password Settings](#)

E-mail Alert

E-mail Alert: Enable Disable

To: 

Cc: 

From: 

Subject:

SMTP Settings

Outgoing SMTP Server:

Username:

Password:

E-mail Alert

- ▶ Select **Enable** to turn on the E-mail Alert function.
- ▶ Select **Disable** to turn off the E-mail Alert function.

To

Define the e-mail address of the E-mail Alert recipient.

Cc

Define the e-mail address of the E-mail Alert "copy to" recipient.

From

Define the e-mail address of the user who sends the E-mail Alert.

Outgoing SMTP server

Define the outgoing SMTP server.

Username

Define the SMTP server user name.

Password

Define the SMTP server password.

User Controls

E-mail Alert

The screenshot shows the 'SMART UF55 Projector Settings' web interface. On the left is a navigation menu with the following items: Home, Control Panel, Network Settings, E-mail Alert (highlighted), and Password Settings. The main content area is titled 'E-mail Alert' and contains the following elements:

- Alert Condition**
 - Lamp Warning
 - Low Lamp Life
 - Temperature Warning
- Buttons: 'E-mail Alert Test' and 'Submit'

Alert Condition

The projector provides three alert conditions (Lamp warning, Low lamp life and Temperature warning).

- ▶ Select the conditions you want to apply, and then press **Submit** to apply the selection. The projector sends an alert e-mail (SMART Alert) to your e-mail address.
- ▶ Press the **E-mail Alert Test** to confirm your e-mail address. The projector sends a test e-mail (SMART Alert- Test Mail) to your e-mail address.